

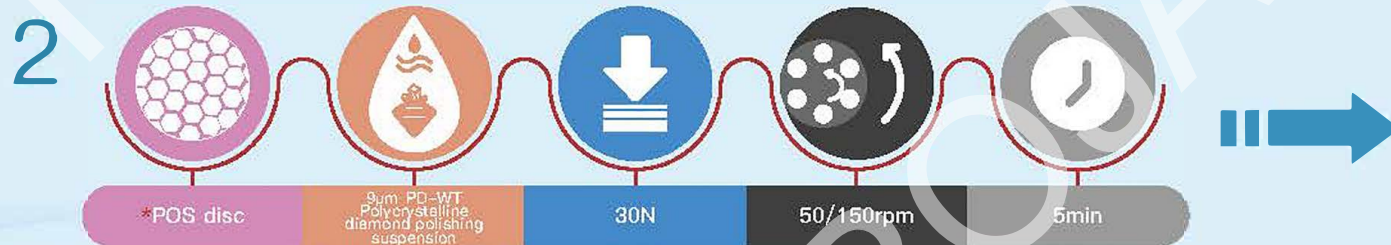




Preparation Procedure—Nickel-Based Superalloy

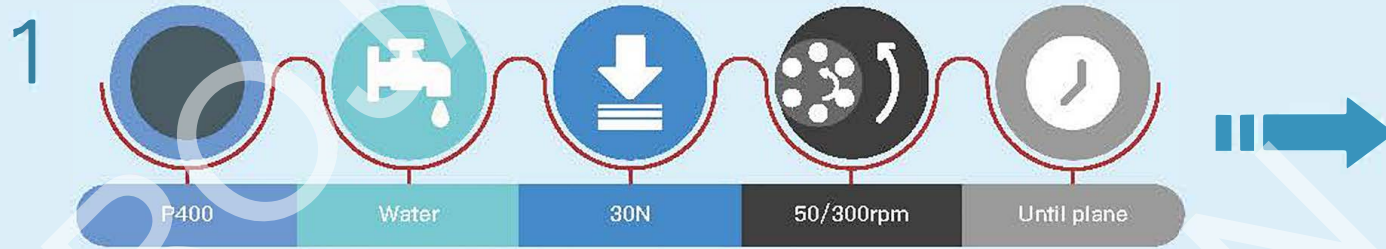

*POS discs can be replaced with P800, P2000, or P2500 sandpaper.

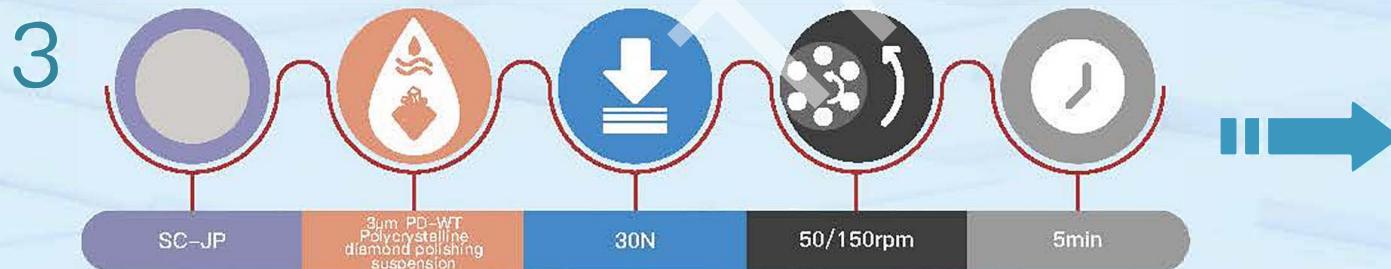

Preparation Procedure—Nickel-Based Superalloy

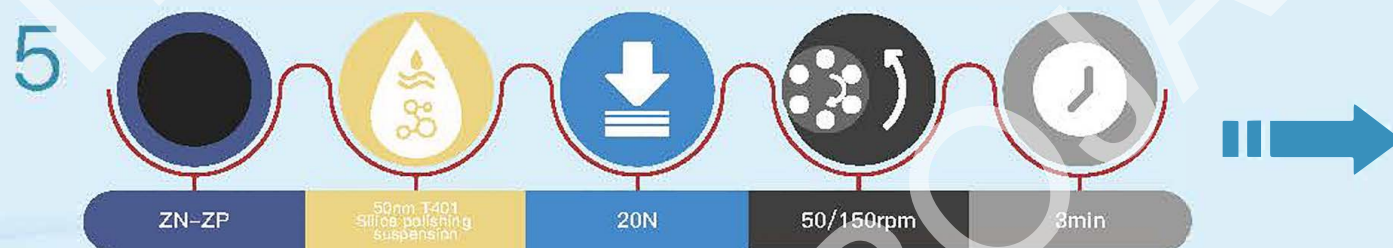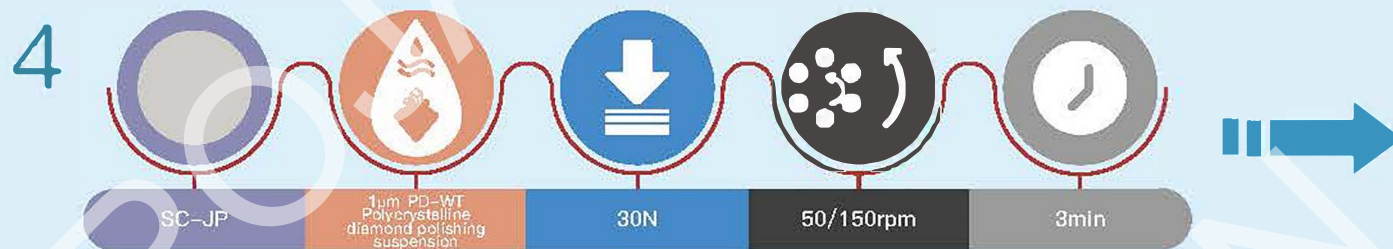

Immerse in Marble's reagent for 10–60 seconds.

