

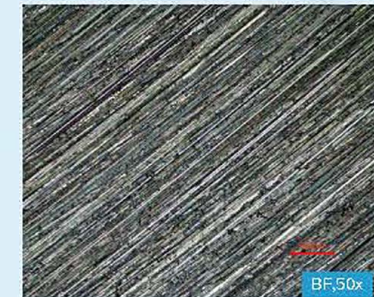




Preparation Procedure—Pure Silver

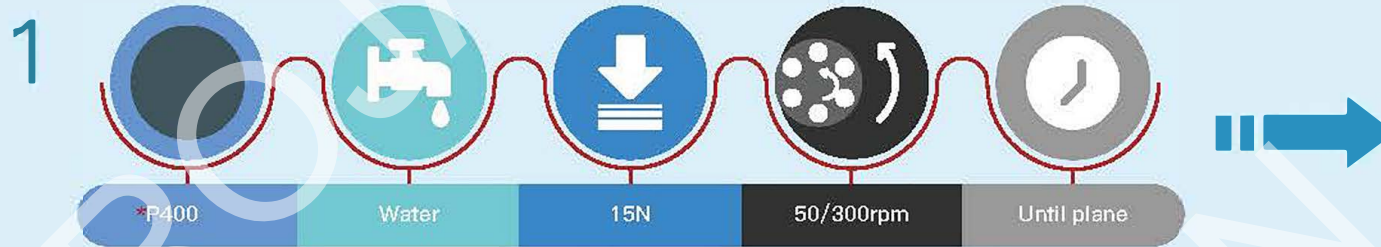



*Apply wax to sandpaper before use to prevent abrasive embedding.

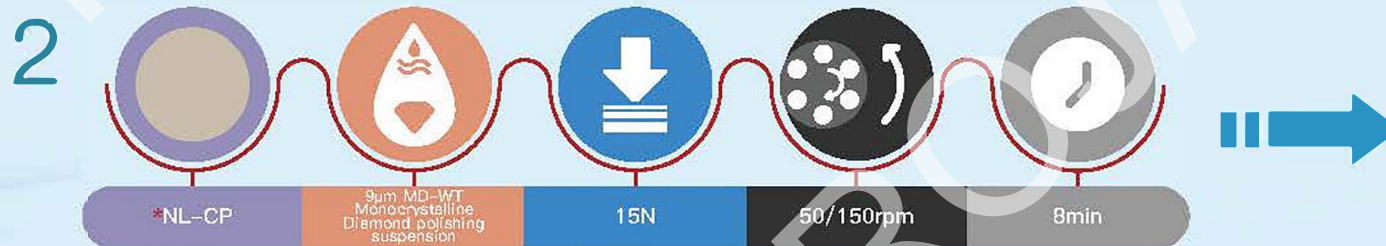

*NL-CP hard-woven, durable synthetic polishing cloth can be replaced with P800, P1500, P2000, or P4000 sandpaper.

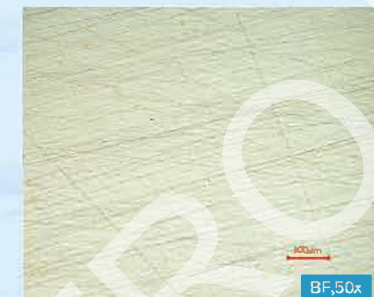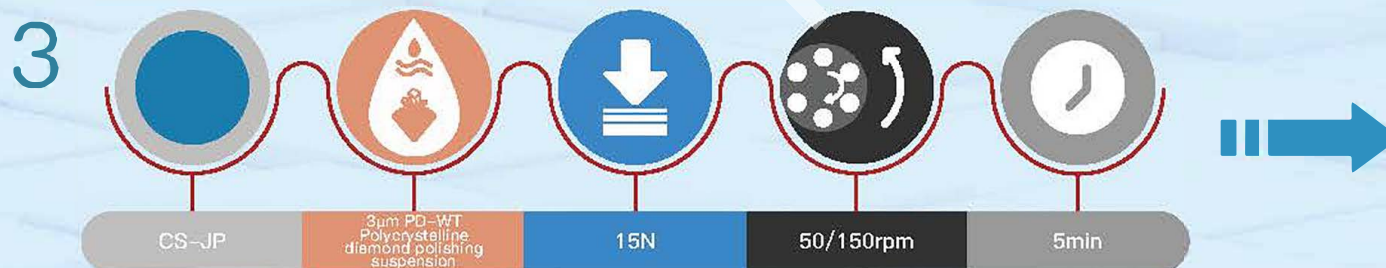

Preparation Procedure—Pure Silver

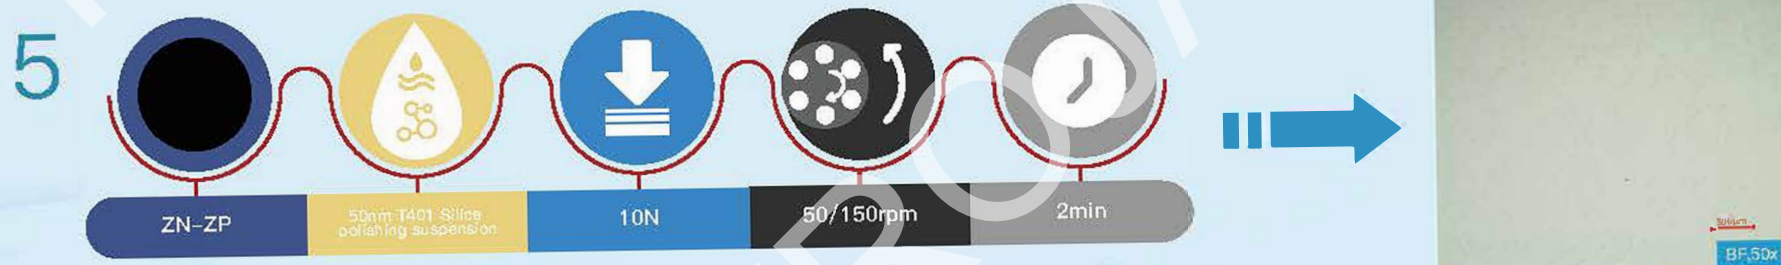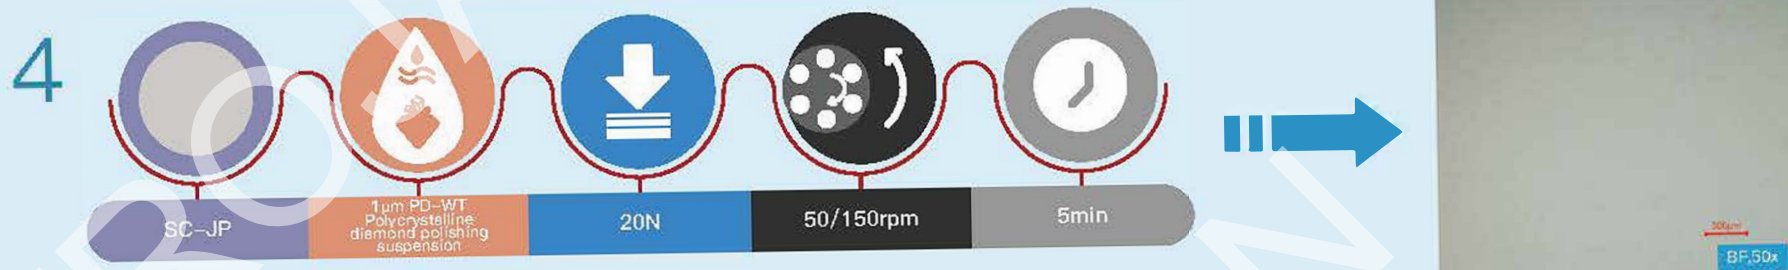

Immerse in a 1:1 solution of 3% hydrogen peroxide and ammonium hydroxide for 10–60 seconds to reveal the microstructure.

